


FICHE D'UTILISATION


SC-PROBE FOR SOIL-CLIK® MODULE AND NODE-BT

INSTALLATION DE SC-PROBE


- ❶ Trempez les deux tiers inférieurs de la sonde pendant 30 minutes avant l'installation. Ne laissez pas l'eau recouvrir le capuchon supérieur où les fils sont connectés.

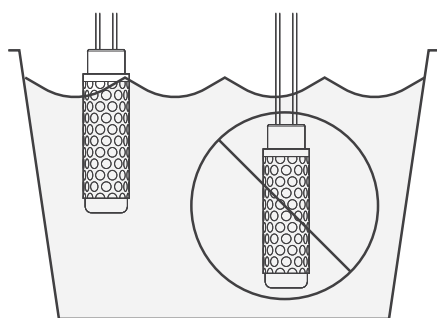


- ❷ Utilisez un tuyau PVC de ½" (12 mm) pour réaliser un trou vertical à la profondeur souhaitée dans le sol (diamètre extérieur de 7/8" (22 mm))

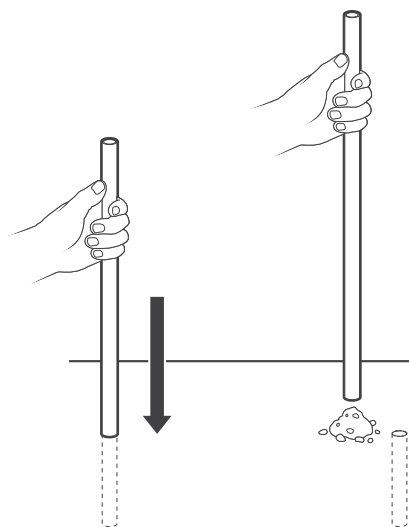

- ❸ Mélanger de l'eau et de la terre. Verser le mélange dans le trou

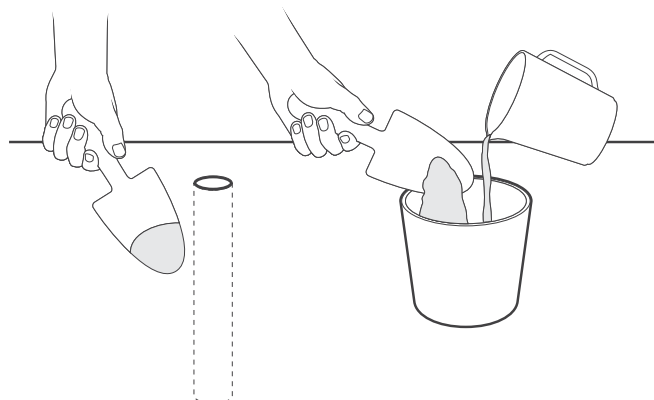

- ❹ Placez le capteur en position verticale (ne pas incliner à plus de 45°) au fond du trou

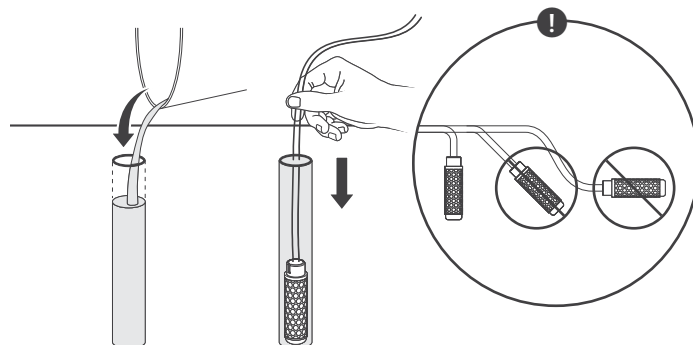

❗ Ne pas installer la sonde horizontalement




Installation information:


Visit hunter.direct/soilclik for complete setup information.

Installing the SC-PROBE (continued)

- 5 Pack native soil tightly around probe. Soil must be in full contact with probe.

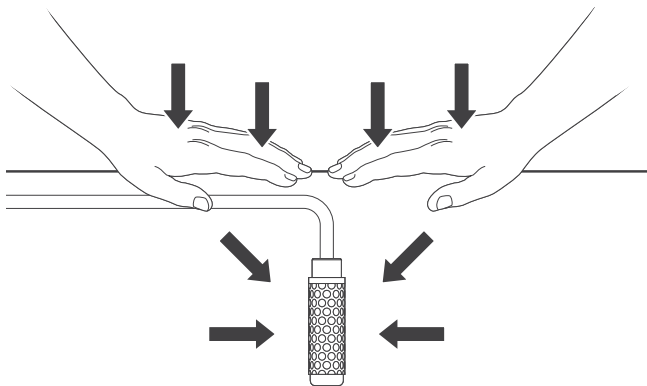


- 6 Allow the probe to acclimate for two to three days and water normally before proceeding to sensor-based irrigation.

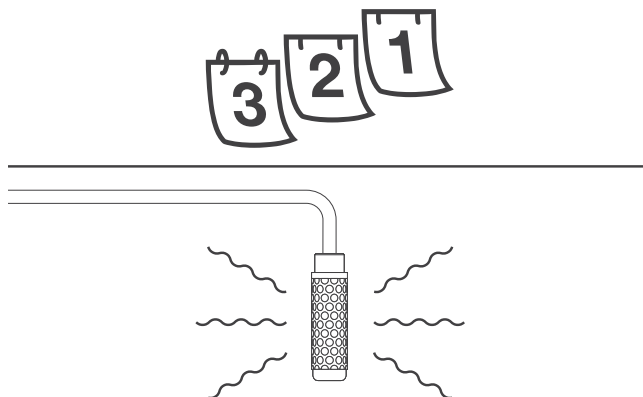


Connecting the Probe to the Soil-Clik Module

Connect the gray/black probe wires to the two gray Soil-Clik module wires with waterproof connections (polarity is not important in this system).

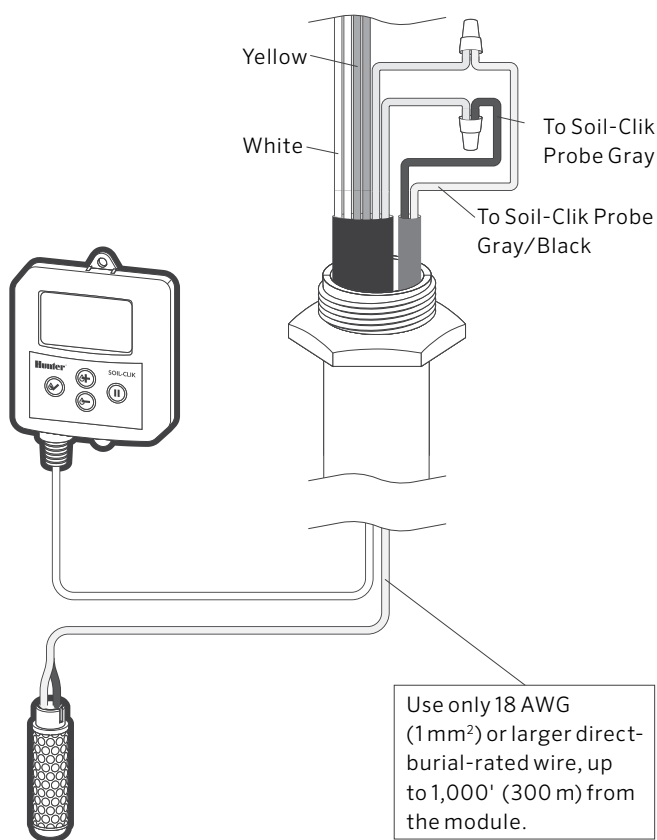

Connecting the Probe to NODE-BT

Cut the clear waterproof seal on the gray two wires connected to the controller. Connect the gray/black probe wires to the two gray NODE-BT wires with waterproof connections (polarity is not important in this system). The Soil-Clik module is not used with NODE-BT installations.

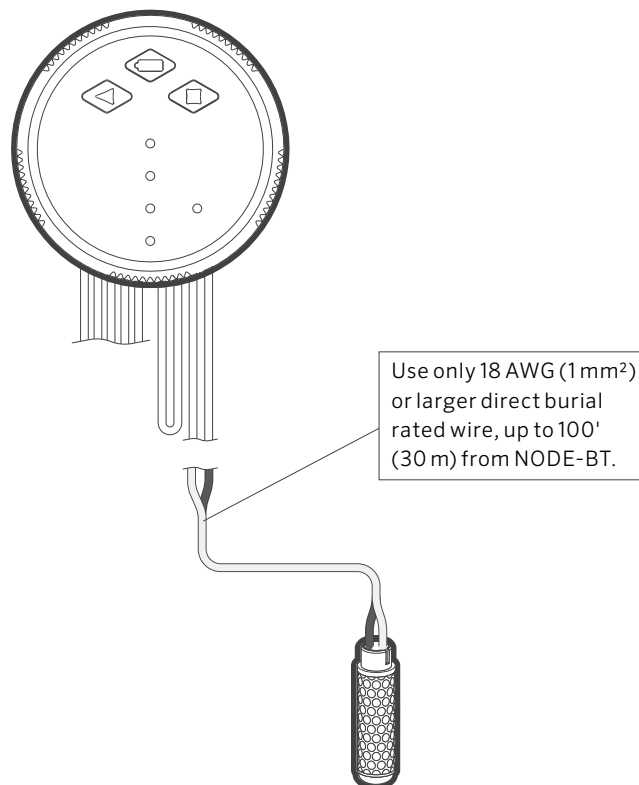

! Avoid high-voltage lines and other sources of electrical interference.